



Smart RFID Reader

Manage user authority for machines and equipment
Control and track access to production sites

Ø22 KW2D Series

Compact and smart design ideal for factory automation environments



* Actual size

Mounts on Ø22mm panel cut-out

- Front unit:
 - 43.6 × 43.6mm
 - Panel front height: 9.0mm
- Back unit:
 - 40.0 × 40.0mm
 - Depth: 48.5mm

Can be used for IC cards, such as employee IDs (*1).

*1 Mifare, FeliCa, etc.

IP65/67-rated to protect from washdowns and oil spills.




Designed to work on metal surfaces often used at factory automation sites.



Equipped with an LED easily visible from the side and an auxiliary buzzer, the RFID reader enables visible and audible feedback on operation status.

* Can be controlled from a host device (such as a touch panel or PLC).

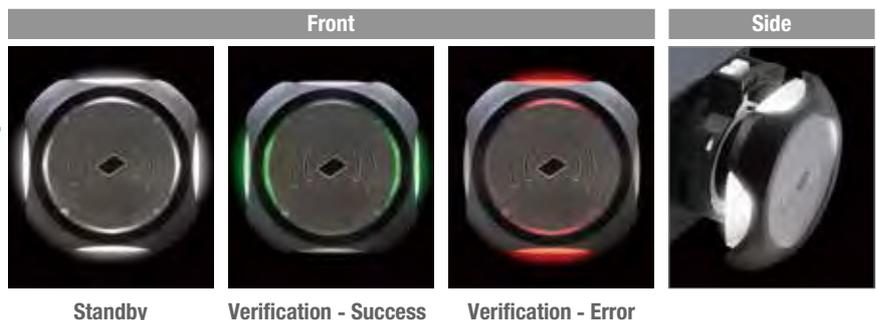

Standby

Verification - Success

Verification - Error

Panel Mount RFID Reader

Holder feature available for mounting RFID tags



* 5 types are available (sold separately).

An Ethernet port enhances connection compatibility with host devices

- Supported protocol: Modbus TCP (server)
- * EtherNet/IP and CC-LINK IE FB will be supported soon.



With a verification function inside, the verified result can be communicated to the host device as data.

* If the verification function is not used, a communication error will occur if the result is not sent back to the RFID main unit.



Manage user authority for machines and devices

BEFORE

Anyone can operate the machines.



AFTER

Inadvertent operation and setting changes are prevented, reducing equipment malfunctions and failures.

Mount the RFID reader on the operation panel of a machine and register the workers in the RFID reader. ID cards can then be used to authenticate each worker.



Track entry/exit at work areas

BEFORE

Do not know if workers are left inside.



AFTER

By recording entry/exit logs, workers can be prevented from being trapped or left behind in a work area.

Worker's names are linked to ID cards such as employee ID cards, and that data is sent when a card is read. Logs are recorded on the host device to track entry/exit.



Manage inspection history

BEFORE

Inspection reports were written by hand.



AFTER

After inspection work, employee ID cards are read and data is recorded.

Inspection details are recorded as electronic data and linked to worker data. The time and work details are recorded on a touch panel or PLC to ensure reliable traceability.



By connecting with devices such as touch panels and PLCs, the RFID reader can be used for wide variety of applications.



Configuration Tool KW RFID Configurator

Operating Environment

Item	Details
OS	Windows10
CPU	1.0GHz or more
Memory	1GB or more
Environment	Microsoft.NET Framework4.0 or later

* The configuration tool can be downloaded from the IDEC website.



Screen 1

RFID Reader Configuration Screen

Intuitive operation allows settings to be configured on a single screen.

RFID Reader Settings | Tag List

Name:

Network Settings

- IP Address: 192 . 168 . 1 . 50
- Subnet Mask: 255 . 255 . 255 . 0
- Default Gateway: 0 . 0 . 0 . 0

Connection Settings

Port No.	Communication Mode	Access	Allow Access by IP Address
502	ModbusTCP Server	<input type="checkbox"/> Restrict	
503	ModbusTCP Server(Maintenance)	<input type="checkbox"/> Restrict	
504	Unused	<input type="checkbox"/> Restrict	
2101	Maintenance Communication Server		
2102	Unused		

Password Settings

- Download Password: Download Password | Download Password(Confirm)
- Upload Password: Upload Password | Upload Password(Confirm)

Tag Read Settings

- IC Tag Standard: ISO/IEC 14443 Type A(MIFARE etc.) ISO/IEC 18092 Type F(FeliCa etc.) ISO/IEC 15693 Type V
- Reading Mode: Keep ON state for a certain time after reading [sec]
- Reading Distance: RSSI0 [Recommended RSSI] KEYFOB: 7, Card: 0
- Reading Time: 300[msec]
- Use Buzzer Use LED


Buttons: Monitor | Download(PC to RFID)

Callouts:

- Only the IP address is required.
- Tag reading distance and response speed can be adjusted.

Connection diagram

* Connect to a computer when configuring settings.

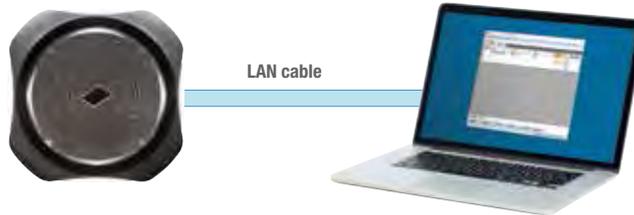

Screen 2

Tag List Registration Screen

- Up to 500 items
- Import and export as CSV file

The RFID reader is equipped with a verification function, enabling output of arbitrary data.


The screenshot shows the "Tag List" tab in the RFID Reader Settings. A callout bubble points to the "Name1" column, stating: "ASCII and Japanese (S-JIS) can be displayed." Below the main table is an inset window titled "RFID Reader Monitor" which has a "Monitor" button. A callout bubble points to this button, stating: "Monitor function enables data to be registered directly to the tag list." At the bottom of the main screen, there is a "Download(PC to RFID)" button. A callout bubble points to this button, stating: "Lastly, click 'Download'".

Enable / Disable	UID	Name1	Name2	Authority (1~255)	Factory reset authority
<input checked="" type="checkbox"/>	1234567890ABCDEF	Izumi Taro	IDEC	3	...
<input checked="" type="checkbox"/>				1	...
<input checked="" type="checkbox"/>				1	...
<input checked="" type="checkbox"/>				1	...

Registered count(4/500)

Buttons: Add, Remove, Up, Down, Import, Export, Monitor, Download(PC to RFID)

When using a supported communication protocol

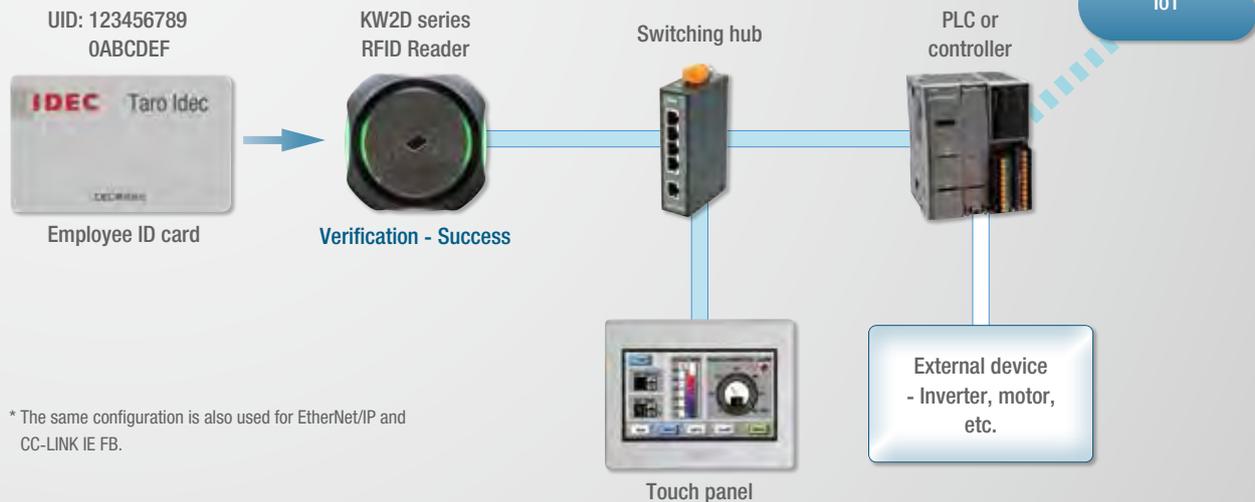


Communication via Ethernet with host devices such as touch panels and PLCs

The following data can be acquired via ModbusTCP communication

- UID Input register (300004 to 300008)
- Name 1 Input register (300012 to 300020)
- Name 2 Input register (300022 to 300030)
- Authority level Input register (300002)
- Verification success Input relay (100001)
- Verification error Input relay (100002)

Next, simply enter the required data via the touch panel or PLC.

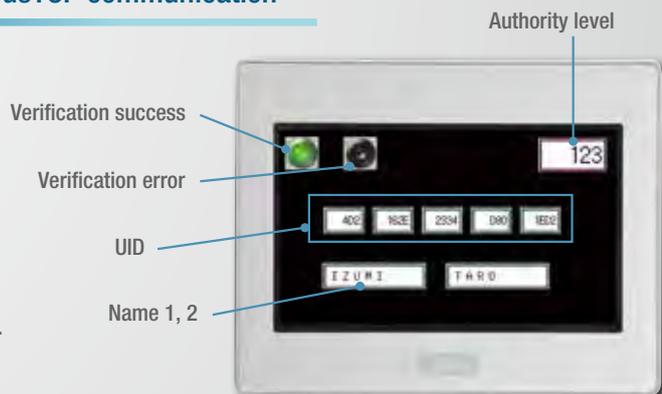

Supported character codes

UTF-8, ASCII, Japanese (Shift-JIS), Chinese (GB2312), Western Europe (ISO 8859-1)

KW2D Series $\varnothing 22$ Smart RFID Reader

Compact RFID reader with integrated functions for the factory automation industry



Note: Approvals apply only to the main unit.
 • For more information about certified products, see the IDEC website.

Main Unit

Package Quantity: 1

Model	Appearance	Power Supply	Approval	Part No. (Ordering No.)
Without holder		24V DC	IEC/EN61131-2 2007 (Zone B) EN301-489-3 UL61010-1/CAN/CSA C22.2 No. 61010-1-12 UL 61010-2-201 EN50364	KW2D-R100Q4E
With holder				KW2D-RH100Q4E

RFID Tags

When ordering, specify the Ordering No.

Tag Type	Shape	Color	Part No. (Ordering No.)	Package Quantity
KEYFOB		Green	KW9Z-T1X1G	1
		Yellow	KW9Z-T1X2Y	1
		Red	KW9Z-T1X3R	1
		Blue	KW9Z-T1X4S	1
		Black	KW9Z-T1X5B	1
Card		N/A	KW9Z-T2X0	2

Maintenance Parts

When ordering, specify the Ordering No.

Name/Appearance	Specification/Dimension	Part No.	Ordering No.	Package Quantity	Remarks
Cover (withot holder)	For KW2D-R	KW9Z-CV	KW9Z-CV	1	
Cover (with holder)	For KW2D-RH	KW9Z-CVH	KW9Z-CVH	1	
Gasket	Rubber (black) Nitrile rubber	HW9Z-WM	HW9Z-WMPN10	10	
Locking Ring	Polyamide resin (black)	CW9Z-LN	CW9Z-LNPN05	10	
Locking Ring Wrench	Metal (brass/nickel-plated) Weigh: Approx. 150g	MW9Z-T1	MW9Z-T1	1	• Used to tighten the locking ring when mounting onto a panel.

General Specifications

Electrical Specifications	Rated Input Voltage	24V DC	
	Power Fluctuation Range	20.4 to 28.8V DC (incl. ripples)	
	Power Consumption	2.4W maximum (24V DC)	
	Rated Insulation Voltage	50V DC	
	Allowable Momentary Power Interruption	1ms (at rated power supply voltage)	
	Withstand Voltage	500V AC, 1 minute	
	Insulation Resistance	100MΩ or higher (500V DC insulation resistance tester)	
	Inrush Current	25A maximum	
	Operating Temperature	-25 to +55°C (no freezing)	
	Storage Temperature	-40 to +80°C (no freezing)	
Environmental Specifications	Operating Humidity	10 to 95% RH (no condensation)	
	Storage Humidity	10 to 95% RH (no condensation)	
	Degree of Protection (*1)	Front Unit (*2) IP65/67 (IEC60529) Back Unit IP20 (IEC60529)	
	Impact Test (*1)	Front Unit (*2) 5J (Equal to IK08)	
	Corrosion Resistance	No corrosive gas	
Mechanical Specifications	Operating Environment	Indoors	
	Vibration Resistance	5 to 55Hz, amplitude 0.5mm, on 3 mutually perpendicular axes	
	Shock Resistance	100m/s ² , 11ms, six directions on 3 mutually perpendicular axes	
	Power Supply Terminal	Wire Pull Force	AWG24: 10N maximum AWG22: 15N maximum AWG20: 20N maximum AWG18: 30N maximum AWG16: 40N maximum
		Insertion/Removal Durability	25 times minimum
		Recommended Operation Force of Pusher	20N (40N maximum)
	Tag Holder	Insertion/Removal Durability	10,000 times minimum
	Indicators	LED colors (red: 2, green: 2 white: 4)	
	Buzzer	Single tone	
	PCB	FR, 94V-0	
	Case Materials	Front Cover Back Cover	PBT
		Front Base Back Base	PA66
		Lens	PCT
	Weight (Approx.)	70g	

*1 IP performance and IK ratings are not subject to UL certification.
*2 Front of the panel only.

Ethernet Communication Specifications

Communication	Ethernet	
Electrical Characteristics	IEEE802.3 compliant	
Connector	Connector	RJ45
	Pull Force	15N
	Insertion/Removal Durability	100 times minimum
Transmission Speed	10BASE-T, 100BASE-TX	
Communication Functions	Modbus TCP Server	
Cable	CAT.5 STP, with a maximum length of 100m	


RFID Interface Specifications

Communication Standards	ISO/IEC14443 Type A (Type A), ISO/IEC18092 (Type F), JIS X6319-4 (Type F), ISO/IEC 15693 (Type V)	
Communication Speed	Type F (Felica)	212kbps
	Type A (Mifare)	106kbps
	Type V (I-CODE)	26.5kbps
Carrier Frequency	13.56MHz (HF band)	
Wireless Standards	Countries	Japan, United States, Canada, EU, China, Taiwan (Planned support: India, Thailand)
Supported Tags (*1)	Card Type	ISO/IEC14443 Type A, ISO/IEC18092, JIS X6319-4, ISO/IEC15693
	KEYFOB Type	ISO/IEC14443 Type A
Tag Reading Distance (*2)	Card Type	0 to 15mm
	KEYFOB Type	0 to 5mm
Tag Reading Position (*3)	Center of tag stationary in center of front unit	
Tag Reading Time	300 to 3000 [msec] (adjustable with [Reading Time] in the KW RFID Configurator)	

*1 Multiple tags cannot be read.
*2 The tag reading distance is a value that was measured using the tags listed in "Names of LSIs in Tested Tags" (on page 2-3 of the User's Manual) that IDEC has tested. The tag reading distance will vary depending on the tag that is actually used and the operating environment.
*3 The tag reading position is the value using a standard IDEC tag placed near the center of the reader. The tag reading distance changes with the tag and operating environment.

Mounting Hole Layout

Drill a mounting hole in the panel with the dimensions shown in the following diagram.

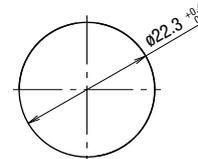

* See the manual for examples of mounting pitch.
* See the manual for minimum mounting pitch.

RFID Tag Specifications


Applicable Standard	Card	ISO/IEC14443 Type A
	KEYFOB	
Operating Temperature	Card	0°C to 50°C
	KEYFOB	-25°C to 55°C
Storage Temperature	Card	-20°C to 50°C
	KEYFOB	-25°C to 75°C
Operating Humidity	Card	20% RH to 90% RH or less
	KEYFOB	60% RH or less
Storage Humidity	Card	90% RH or less
	KEYFOB	60% RH or less
Reading Distance	Card	0 to 10mm
	KEYFOB	0 to 5mm
Operating Environment	Indoors	

Dimensions


(Units: mm)

Main Unit

Without holder: KW2D-R100Q4E

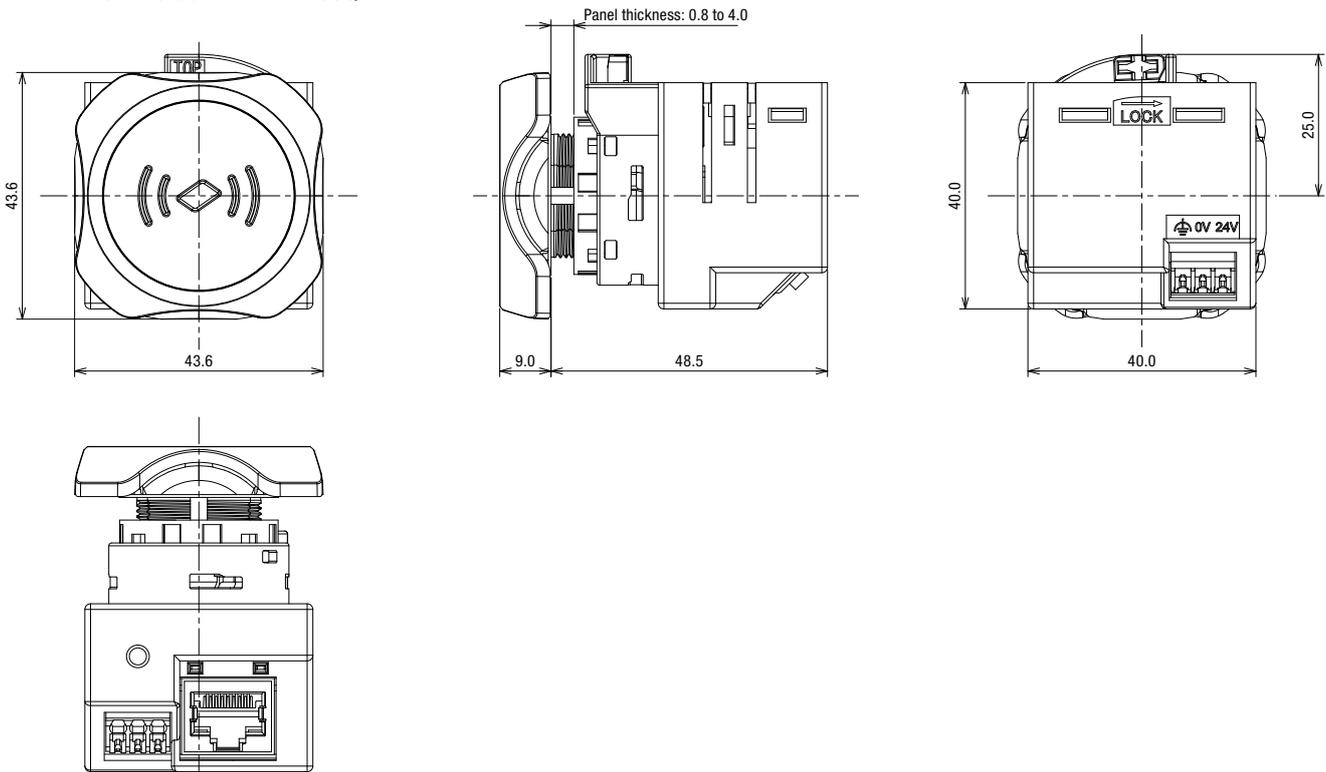

With holder: KW2D-RH100Q4E

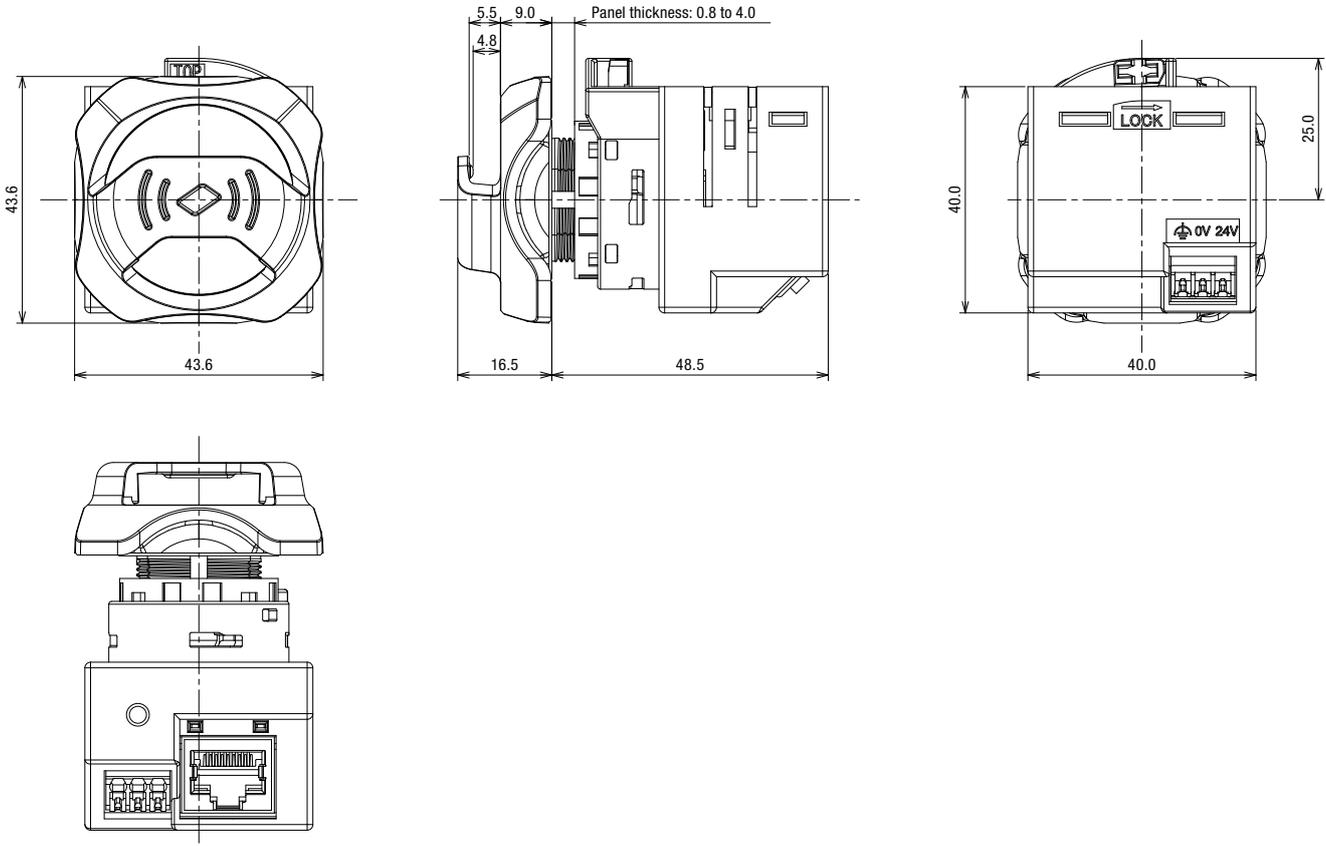

ERMEC, S.L. BARCELONA
 C/ Francesc Teixidó, 22
 08918 Badalona
 España
 bcn@ermec.com

ERMEC MADRID
 C/ Puerto Rico, 4
 28222 Majadahonda
 España
 madrid@ermec.com

ERMEC PORTUGAL
 Rua Brito Capelo, 807
 4450-068 Matosinhos
 Portugal
 portugal@ermec.com

Tel. +34 934 501 600
 www.ermec.com



ERMEC, S.L. BARCELONA
 C/ Francesc Teixidó, 22
 08918 Badalona SPAIN

Tel. +34 902 450 160
 info@ermec.com
 www.ermec.com

ERMEC, S.L. - MADRID
 C/ Puerto Rico, 4
 28222 Majadahonda (Madrid) SPAIN

bilbao@ermec.com
 portugal@ermec.com




Dimensions

(Units: mm)


Tag

KEYFOB type: KW9Z-T1X1G, KW9Z-T1X2Y, KW9Z-T1X3R, KW9Z-T1X4S, KW9Z-T1X5B

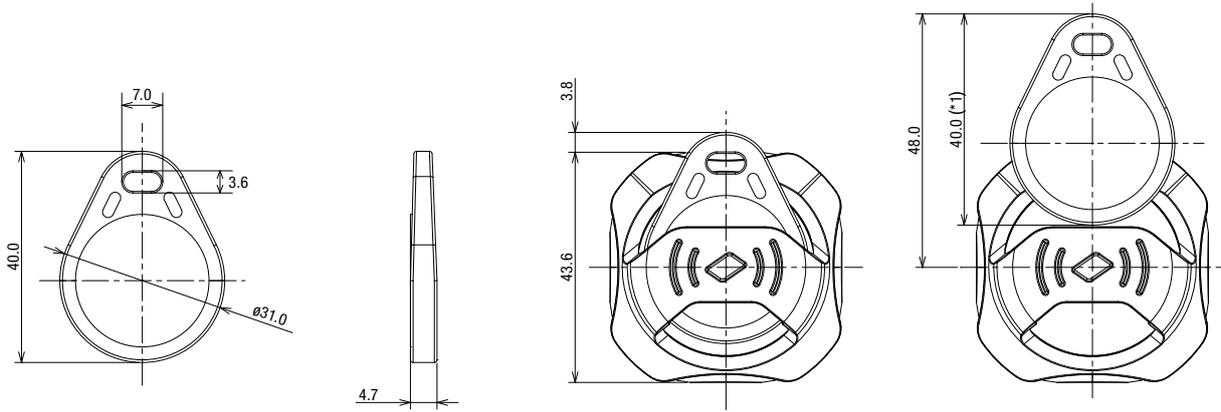


*1 Minimum size with KEYFOB attached.


Card type: KW9Z-T2X0

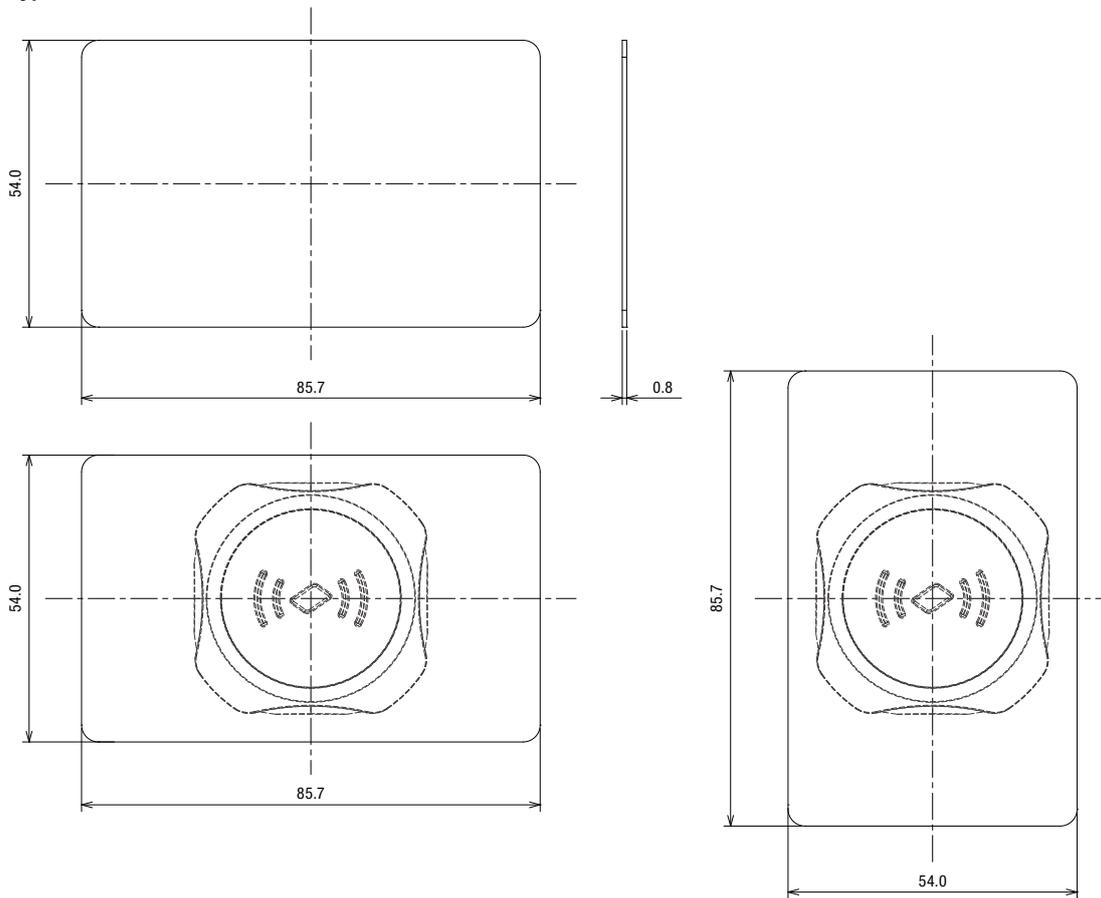

Cover
KW9Z-CV

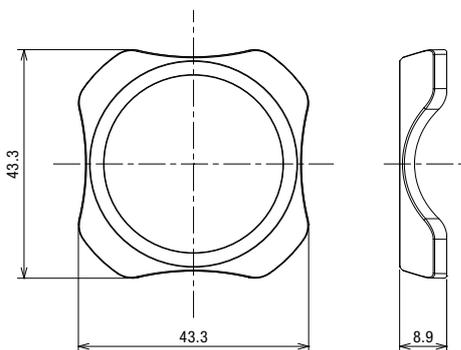

KW9Z-CVH

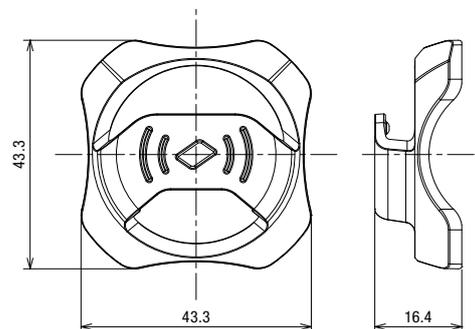

⚠ Safety Precautions


- Be sure to turn off the power before starting installation, removal, wiring, maintenance, and inspection work. Failure to turn power off may cause electrical shocks or fire hazard.

Precautions for Use

Installation and Wiring Precautions


Installation Space

Metal around the front unit will affect the reading distance of RFID tags. If the front unit is surrounded with metal, separate the metal from the front unit by 20mm or more.

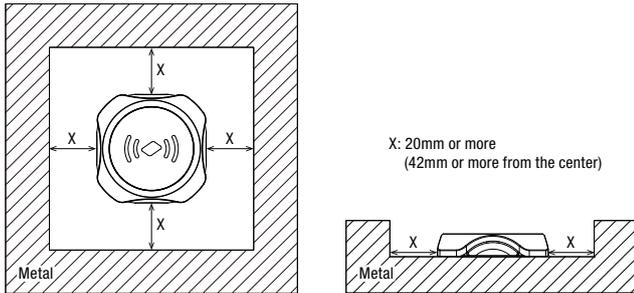


When Multiple Tags Are in the Reading Area

The wrong tag may be detected. Keep tags that should not be read 150mm or more from the area around the front unit.

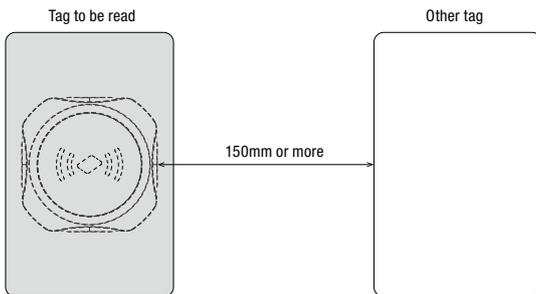

Removing the Back Unit


- 1) To remove the back unit from the front unit, press the lock lever (1) while turning it to the left.

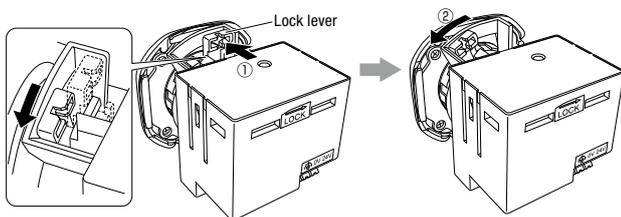

- 2) To attach the back unit, align the TOP marks on the front unit and the back unit, and then insert the back unit into the front unit. Turn the lock lever to the right to lock it.


Panel Mounting Method

Insert the front unit into the mounting hole from the front side of the panel, and install the locking ring from the back side of the panel. Locking ring recommended tightening torque: 2.0N·m

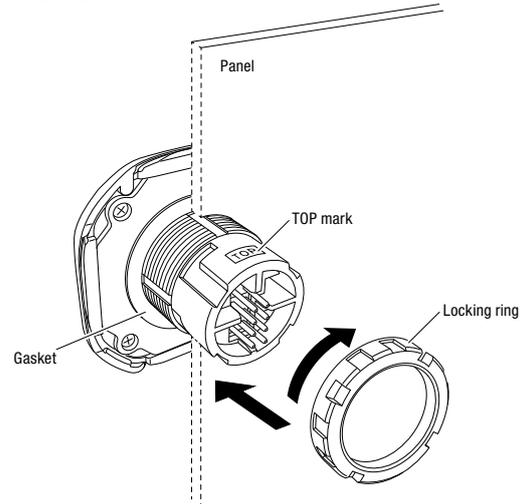

Attaching the Front Cover

- 1) Attach hook section B (long) of the front cover to the front unit.
- 2) Push hook section A (short) onto the front unit.
- 3) The cover (without holder) and cover (with holder) are installed in the same way.

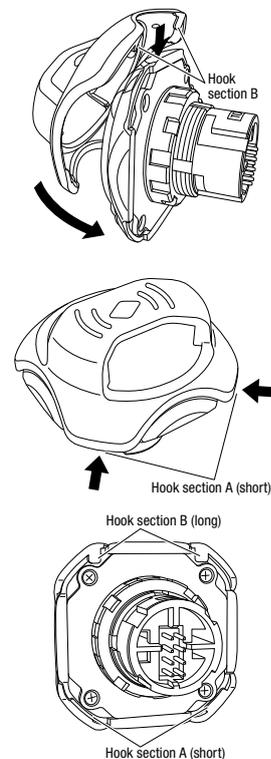


The front cover can be attached with a pitch of 90°.

Instructions

Applicable Wire

Power Supply Wiring

- The KW2D Series RFID Reader has a push-in style terminal block.
- An inrush current of 25A or lower (when input is 24V DC) flows when the power is turned on. Use a power supply with sufficient capacity.
- To prevent induction, keep the power line as short as possible, and as far away as possible from motor lines.
- The following table shows the signals that correspond to the signal codes. Be careful not to mistake the connections.

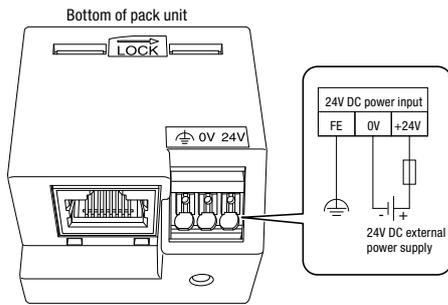

Label/Symbol	Signal Wire
24V	Power supply (+24V)
0V	Power supply (0V)
	Functional ground (FE)

When wiring, use the applicable wires shown below.

Applicable Wire and Specifications

Applicable Wire	0.25 to 1.5mm ² (AWG16 to 24)
Wire Strip Length (*1)	8 ± 1mm (*2)
Ferrule Size (*1)	H0.5 to H1.5 (without insulated cover) H0.25 to H0.75 (with insulated cover)

*1 For details on ferrules, see the "Wire Size and Recommended Ferrules" table below.
*2 Strip the sheath of the wire 8±1mm from the end.

Note: Make sure that the stranded wires do not loosen when using wiring without ferrules.



Wire Size and Recommended Ferrules

Ferrules without insulated covers

Applicable Wire (Stranded Wire)		Wire Strip Length	Weidmüller Recommended Part No.
AWG	mm ²		
20	0.50	10 to 11mm	H0.5/10
18	0.75	10 to 11mm	H0.75/10
17	1.00	10 to 11mm	H1.0/10
16	1.50	10 to 11mm	H1.5/10

Ferrules with insulated covers


Applicable Wire (Stranded Wire)		Wire Strip Length	Weidmüller Recommended Part No.
AWG	mm ²		
24	0.25	10 to 11mm	H0.25/12 HBL
22	0.34	10 to 11mm	H0.34/12 TK
20	0.50	10 to 11mm	H0.5/14 OR
20	0.50	10 to 11mm	H0.5/14S OR
20	0.50	10 to 11mm	H0.5/14S W
18	0.75	10 to 11mm	H0.75/14 W

*1 UL wire compatible with insulated cover

Recommended Tools (Optional)


The following recommended tools can be used. The recommended tools are manufactured by Weidmüller.

Name		Weidmüller Recommended Part No.
Flat blade screwdriver	Normal type	SDS 0.4 × 2.5 × 75
	With insulated cover	SDS 0.4 × 2.5 × 75
Crimping tool		PZ6/5

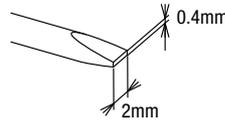


Crimping of Ferrules and Wiring

- Choose an appropriate ferrule for the wire.
- Cut the wire carefully to get a flat end.
- Make sure that ferrule sleeve is completely filled by the conductor. Depending on the cross section, the conductor should protrude approx. 0 to 1mm from the ferrule sleeve.



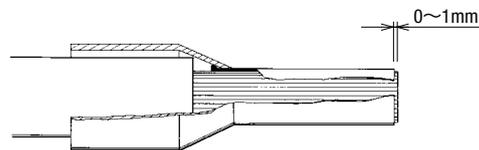


- When crimping, refer to the instructions of the crimping tool.

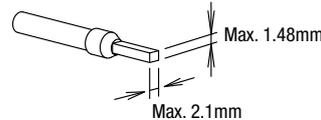

Faults which can occur during crimping:

- Cracks along the sides and die impressions
- Splitting of the ferrules
- Asymmetrical crimping shape
- Extreme burrs formed along the sides
- Ferrule not filled by conductor
- Single conductors pushed back by protruding from the insulated cover
- Single conductors squeezed off
- Insulation cover damaged by the crimping jaw
- Conductor insulation not pushed into the insulated cover
- Ferrule bent longitudinally after crimping



Ordering Terms and Conditions

Thank you for using IDEC Products.

By purchasing products listed in our catalogs, datasheets, and the like (hereinafter referred to as "Catalogs") you agree to be bound by these terms and conditions. Please read and agree to the terms and conditions before placing your order.

1. Notes on contents of Catalogs

- (1) Rated values, performance values, and specification values of IDEC products listed in this Catalog are values acquired under respective conditions in independent testing, and do not guarantee values gained in combined conditions.
Also, durability varies depending on the usage environment and usage conditions.
- (2) Reference data and reference values listed in Catalogs are for reference purposes only, and do not guarantee that the product will always operate appropriately in that range.
- (3) The specifications / appearance and accessories of IDEC products listed in Catalogs are subject to change or termination of sales without notice, for improvement or other reasons.
- (4) The content of Catalogs is subject to change without notice.

2. Note on applications

- (1) If using IDEC products in combination with other products, confirm the applicable laws / regulations and standards.
Also, confirm that IDEC products are compatible with your systems, machines, devices, and the like by using under the actual conditions. IDEC shall bear no liability whatsoever regarding the compatibility with IDEC products.
- (2) The usage examples and application examples listed in Catalogs are for reference purposes only. Therefore, when introducing a product, confirm the performance and safety of the instruments, devices, and the like before use. Furthermore, regarding these examples, IDEC does not grant license to use IDEC products to you, and IDEC offers no warranties regarding the ownership of intellectual property rights or non-infringement upon the intellectual property rights of third parties.
- (3) When using IDEC products, be cautious when implementing the following.
 - i. Use of IDEC products with sufficient allowance for rating and performance
 - ii. Safety design, including redundant design and malfunction prevention design that prevents other danger and damage even in the event that an IDEC product fails
 - iii. Wiring and installation that ensures the IDEC product used in your system, machine, device, or the like can perform and function according to its specifications
- (4) Continuing to use an IDEC product even after the performance has deteriorated can result in abnormal heat, smoke, fires, and the like due to insulation deterioration or the like. Perform periodic maintenance for IDEC products and the systems, machines, devices, and the like in which they are used.
- (5) IDEC products are developed and manufactured as general-purpose products for general industrial products. They are not intended for use in the following applications, and in the event that you use an IDEC product for these applications, unless otherwise agreed upon between you and IDEC, IDEC shall provide no guarantees whatsoever regarding IDEC products.
 - i. Use in applications that require a high degree of safety, including nuclear power control equipment, transportation equipment (railroads / airplanes / ships / vehicles / vehicle instruments, etc.), equipment for use in outer space, elevating equipment, medical instruments, safety devices, or any other equipment, instruments, or the like that could endanger life or human health
 - ii. Use in applications that require a high degree of reliability, such as provision systems for gas / waterworks / electricity, etc., systems that operate continuously for 24 hours, and settlement systems
 - iii. Use in applications where the product may be handled or used deviating from the specifications or conditions / environment listed in the Catalogs, such as equipment used outdoors or applications in environments subject to chemical pollution or electromagnetic interference
If you would like to use IDEC products in the above applications, be sure to consult with an IDEC sales representative.

3. Inspections

We ask that you implement inspections for IDEC products you purchase without delay, as well as thoroughly keep in mind management/maintenance regarding handling of the product before and during the inspection.

4. Warranty

(1) Warranty period

The warranty period for IDEC products shall be one (1) year after purchase or delivery to the specified location. However, this shall not apply in cases where there is a different specification in the Catalogs or there is another agreement in place between you and IDEC.

(2) Warranty scope

Should a failure occur in an IDEC product during the above warranty period for reasons attributable to IDEC, then IDEC shall replace or repair that product, free of charge, at the purchase location / delivery location of the product, or an IDEC service base. However, failures caused by the following reasons shall be deemed outside the scope of this warranty.

- i. The product was handled or used deviating from the conditions / environment listed in the Catalogs
 - ii. The failure was caused by reasons other than an IDEC product
 - iii. Modification or repair was performed by a party other than IDEC
 - iv. The failure was caused by a software program of a party other than IDEC
 - v. The product was used outside of its original purpose
 - vi. Replacement of maintenance parts, installation of accessories, or the like was not performed properly in accordance with the user's manual and Catalogs
 - vii. The failure could not have been predicted with the scientific and technical standards at the time when the product was shipped from IDEC
 - viii. The failure was due to other causes not attributable to IDEC (including cases of force majeure such as natural disasters and other disasters)
- Furthermore, the warranty described here refers to a warranty on the IDEC product as a unit, and damages induced by the failure of an IDEC product are excluded from this warranty.

5. Limitation of liability

The warranty listed in this Agreement is the full and complete warranty for IDEC products, and IDEC shall bear no liability whatsoever regarding special damages, indirect damages, incidental damages, or passive damages that occurred due to an IDEC product.

6. Service scope

The prices of IDEC products do not include the cost of services, such as dispatching technicians. Therefore, separate fees are required in the following cases.

- (1) Instructions for installation / adjustment and accompaniment at test operation (including creating application software and testing operation, etc.)
- (2) Maintenance inspections, adjustments, and repairs
- (3) Technical instructions and technical training
- (4) Product tests or inspections specified by you

The above content assumes transactions and usage within your region. Please consult with an IDEC sales representative regarding transactions and usage outside of your region. Also, IDEC provides no guarantees whatsoever regarding IDEC products sold outside your region.



ERMEC, S.L. BARCELONA
C/ Francesc Teixidó, 22
08918 Badalona SPAIN

Tel. +34 902 450 160
info@ermec.com
www.ermec.com

ERMEC, S.L. - MADRID
C/ Puerto Rico, 4
28222 Majadahonda (Madrid) SPAIN

bilbao@ermec.com
portugal@ermec.com

For details on installation, wiring, and maintenance, see the Instruction Sheet and User's Manual from the URL below.

URL: <https://product.idec.com/?product=KW2D>



IDEC recommends the use of the RFID reader with the following products.

Flush Silhouette Switches

USB/RJ45 Relay Ports

CW

ø22



Projects only 2mm from the panel. Ideal for panels that require cleanliness and safety.

Ethernet Switches

SX5E



Rugged design. Suitable for a range of applications. Unmanaged Ethernet switches equipped with various features.

PLCs/Controllers/Operator Interfaces

Smart Relays

FL1F



Equipped with convenience and high functionality. Multiple power supply variations.

PLCs/Controllers

FC6A Plus/All-in-One



FC6A Plus is ideal for controlling not only large-size machines, but also entire small-size production lines. FC6A All-in-One has high performance and easy programming features.

PLCs/Controllers/Operator Interfaces

PLC / Controllers

FT1A Touch

3.8 inch



Built-in LCD enables control and display with high visibility.

Operator Interfaces

HG Series



Excellent visibility by super-bright LED backlight. Withstands harsh environments.

Safety Products

Interlock Switches

HS5L



Interlock switch with solenoid. 2-contact: ideal for use on applications such as food machines and injection molding machines. 4-contact: ideal for use on limited mounting spaces such as small doors.

Safety Switch

HS1T



Interlock switch with solenoid. Ideal for use on large doors and large equipment requiring strong locking force (5000N). Equipped with head rotating structure.



www.ermec.com

IDEC CORPORATION

www.idec.com

Head Office

6-64, Nishi-Miyahara-2-Chome, Yodogawa-ku, Osaka 532-0004, Japan

USA	IDEC Corporation	Tel: +1-408-747-0550	opencontact@idec.com	Taiwan	IDEC Taiwan Corporation	Tel: +886-2-2577-6938	service@tw.idec.com
Germany	APEM GmbH	Tel: +49-40-25 30 54-0	service@eu.idec.com	Hong Kong	IDEC Izumi (H.K.) Co., Ltd.	Tel: +852-2803-8989	info@hk.idec.com
Singapore	IDEC Izumi Asia Pte. Ltd.	Tel: +65-6746-1155	info@sg.idec.com	China	IDEC (Shanghai) Corporation	Tel: +86-21-6135-1515	idec@cn.idec.com
Thailand	IDEC Asia (Thailand) Co., Ltd	Tel: +66-2-392-9765	sales@th.idec.com		Beijing Branch	Tel: +86-10-6581-6131	idec@cn.idec.com
Australia	IDEC Australia Pty. Ltd.	Tel: +61-3-8523-5900	sales@au.idec.com		Guangzhou Branch	Tel: +86-20-8362-2394	idec@cn.idec.com
India	IDEC Controls India Private Limited	Tel: +91-80679-35328	info_india@idec.com	Japan	IDEC Corporation	Tel: +81-6-6398-2527	marketing@idec.co.jp

Specifications and other descriptions in this brochure are subject to change without notice.

Information in this brochure is current as of September, 2020.

© 2020 IDEC Corporation, All Rights Reserved.

EP1741-0



ERMEC, S.L. BARCELONA
C/ Francesc Teixido, 22
08918 Badalona SPAIN


Tel. +34 902 450 160
info@ermec.com
www.ermec.com

ERMEC, S.L. - MADRID
C/ Puerto Rico, 4
28222 Majadahonda (Madrid) SPAIN

bilbao@ermec.com
portugal@ermec.com



+Información del producto

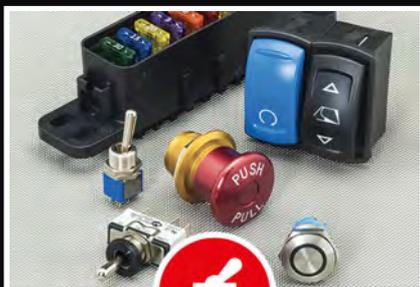


INTERRUPTORES

Pulsadores, Interruptores, para PCB, de Palanca, E-Stops, Piezoeléctricos, Antivandálicos, Microswitches




CONEXIÓN

Conectores circulares, Bases y conectores IEC, Cables flexibles

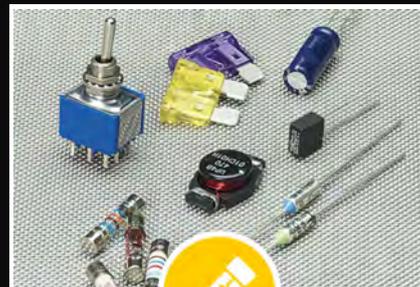

ELECTRÓNICA

Componentes para la protección y medición electrónica, Conectores PCB, Fusibles, Relés, Pilas

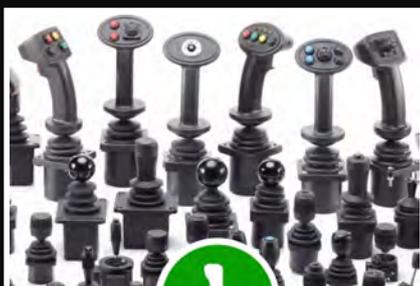

JOYSTICKS

Joysticks, Trackballs, Single Axis, HandGrips



TECLADOS

Teclados y Paneles



PILOTOS

Indicadores led, Pilotos, Lámparas




SENSORES

Sensores Reed, Sensores y Limitadores de temperatura, Sensores de proximidad



MOTION

Motores, Motorreductores, Encóders, Solenoides, Actuadores lineales, PMG

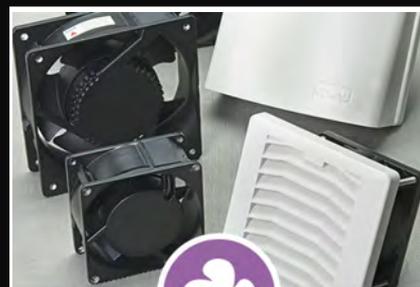

VENTILACIÓN

Ventiladores de AC y DC, accesorios y unidades de ventilación